



Step 1

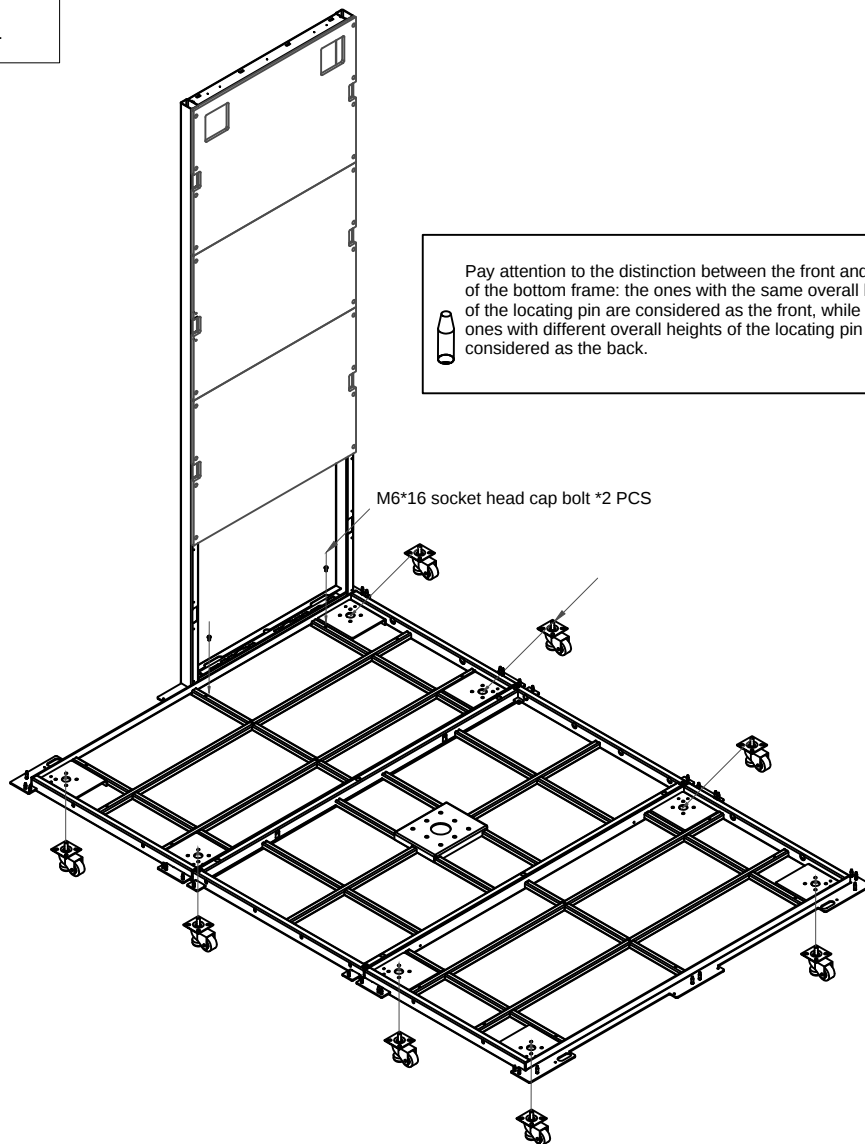


After fixing the castor to the bottom frame using M8*20 socket head cap bolt, to install the left wall frame: After the wall is aligned with the positioning pin of the bottom frame, to fix the the left wall and the bottom frame using the M6*16 socket head cap bolt.

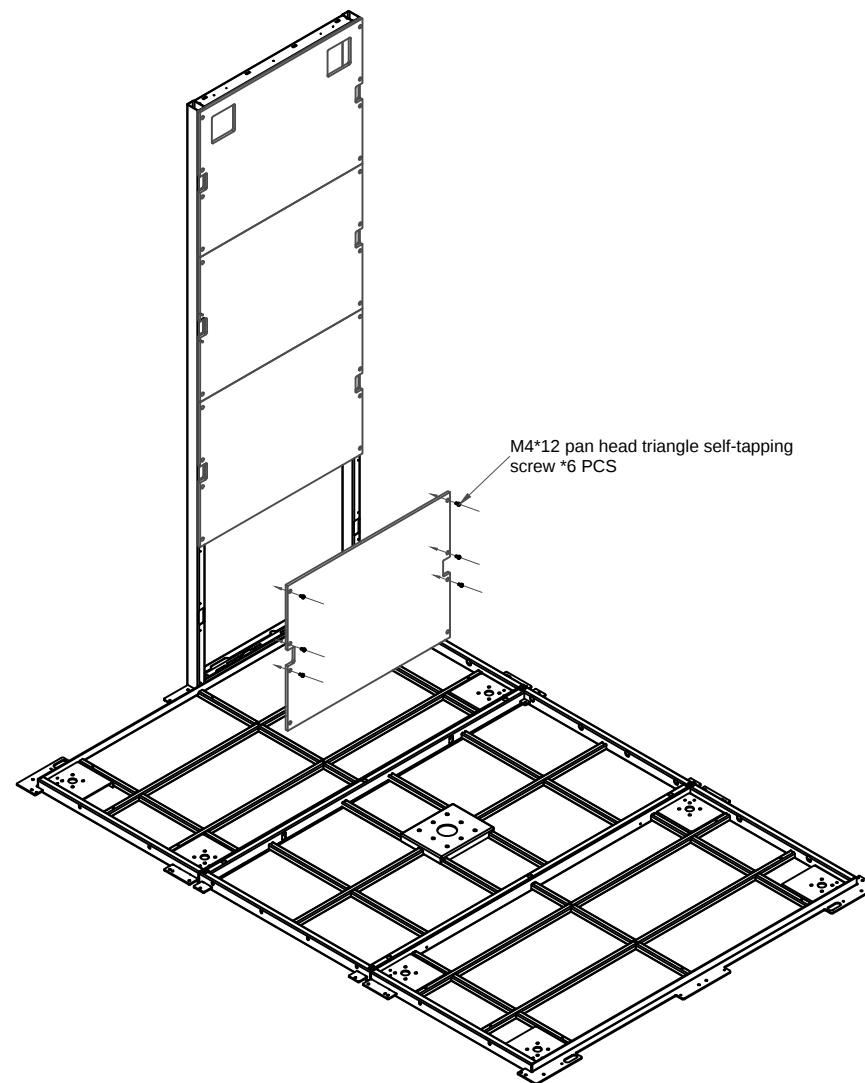


After the installation of the left wall 1, to fix the inner lower panel with the left wall 1 using the M4*12 pan head triangle self-tapping screw.


Step 2

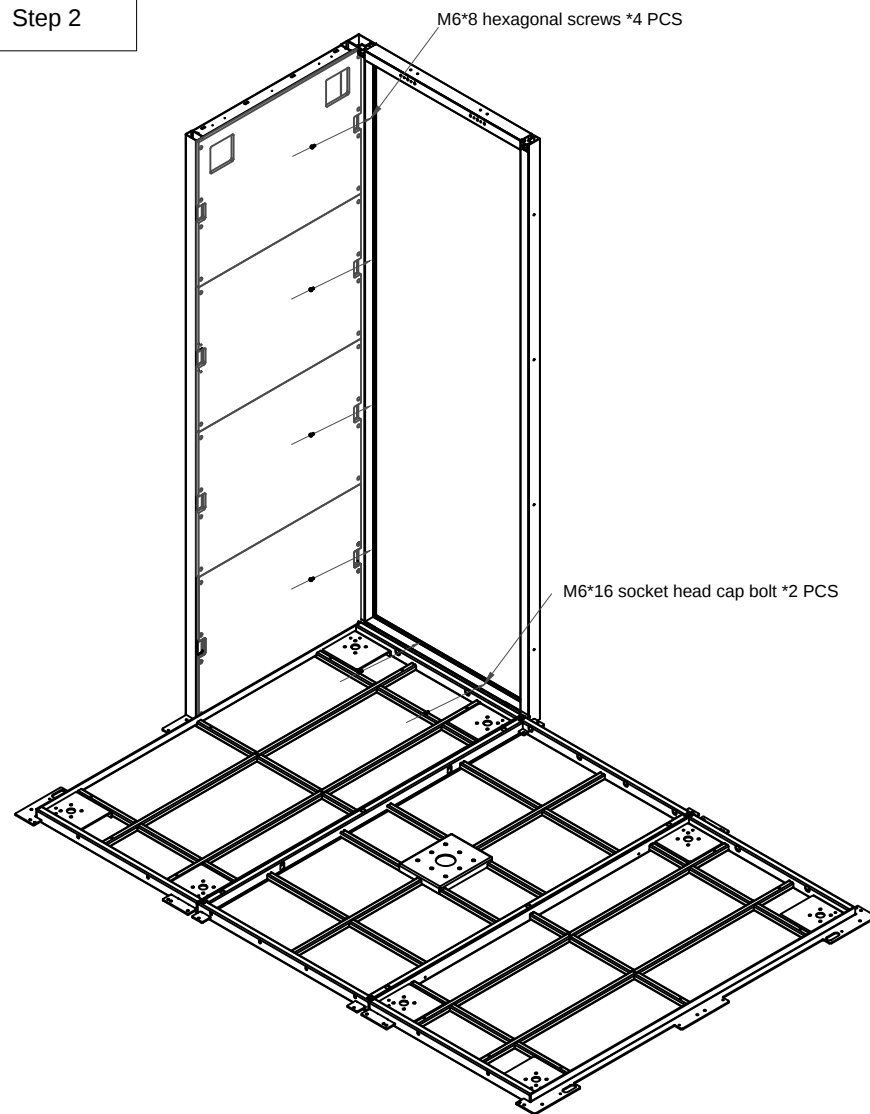


Installation of the left back glass frame: After positioning the bottom frame with the corresponding wall, use M6*16 socket head cap bolt to fix the left back glass frame to the bottom frame, and then use M6*8 hexagonal screws to fix the left back glass frame to the left wall 1.

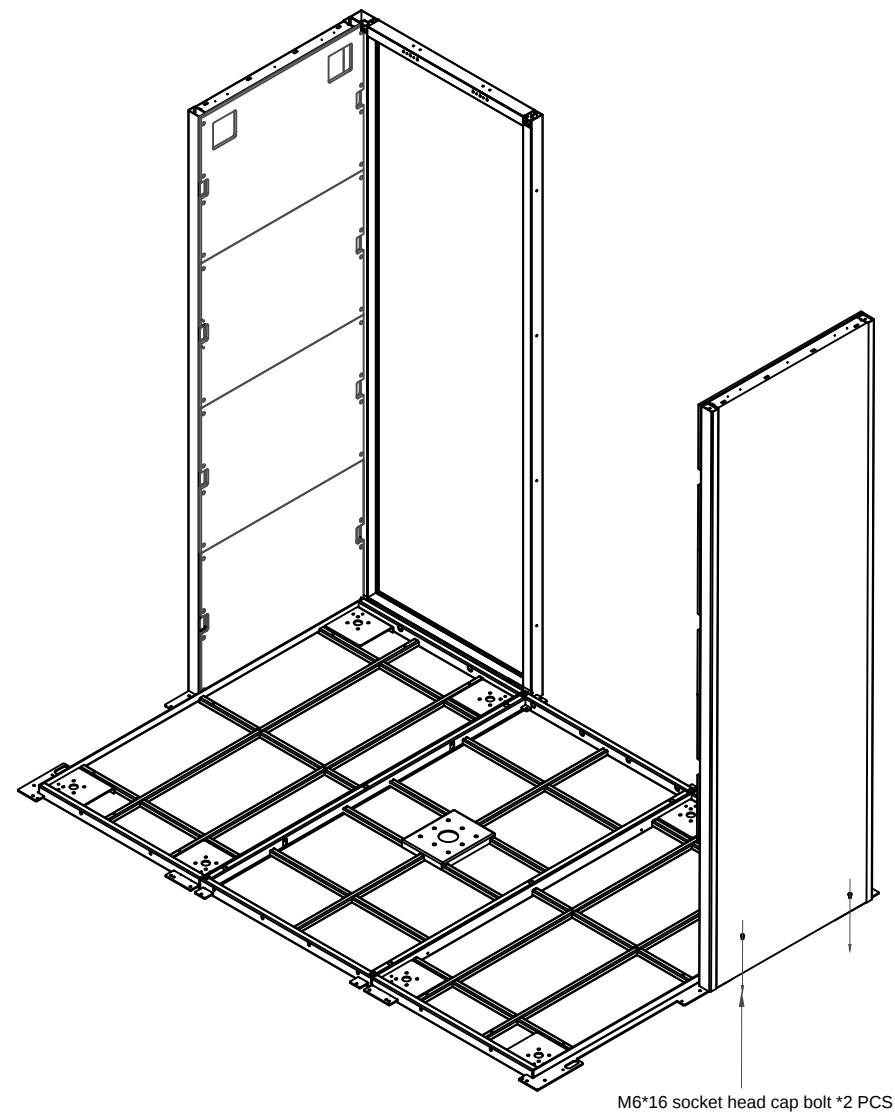

After the wall is aligned with the positioning pin of the bottom frame, to fix the the right wall 1 and the bottom frame using the M6*16 socket head cap bolt.

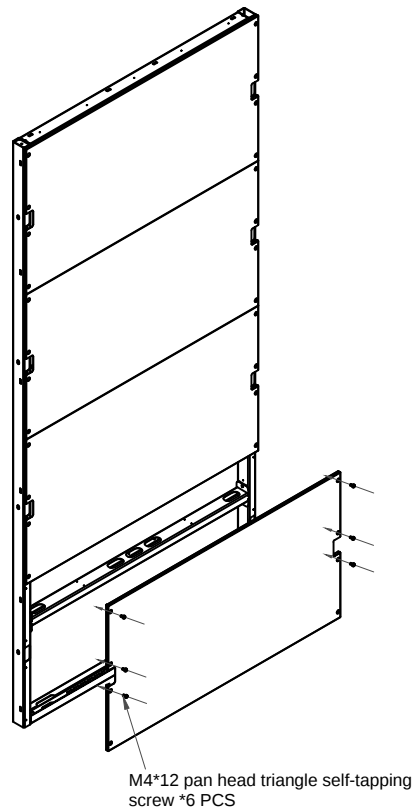


After the installation of the right wall 1, to fix the inner lower panel with the right wall 1 using the M4*12 pan head triangle self-tapping screw.

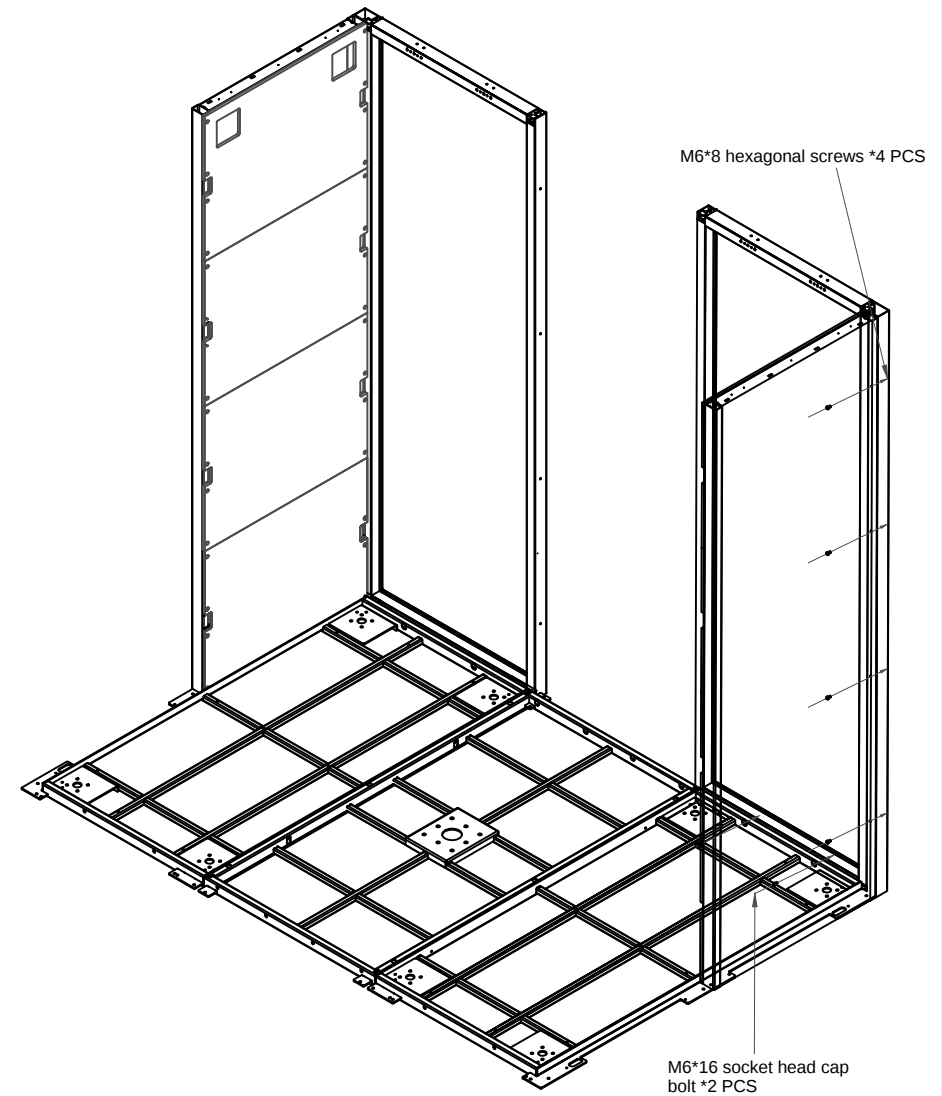


Installation of the right back glass frame: After positioning the bottom frame with the corresponding wall, use M6*16 socket head cap bolt to fix the right back glass frame to the bottom frame, and then use M6*8 hexagonal screws to fix the right back glass frame to the right wall 1.

Step 4

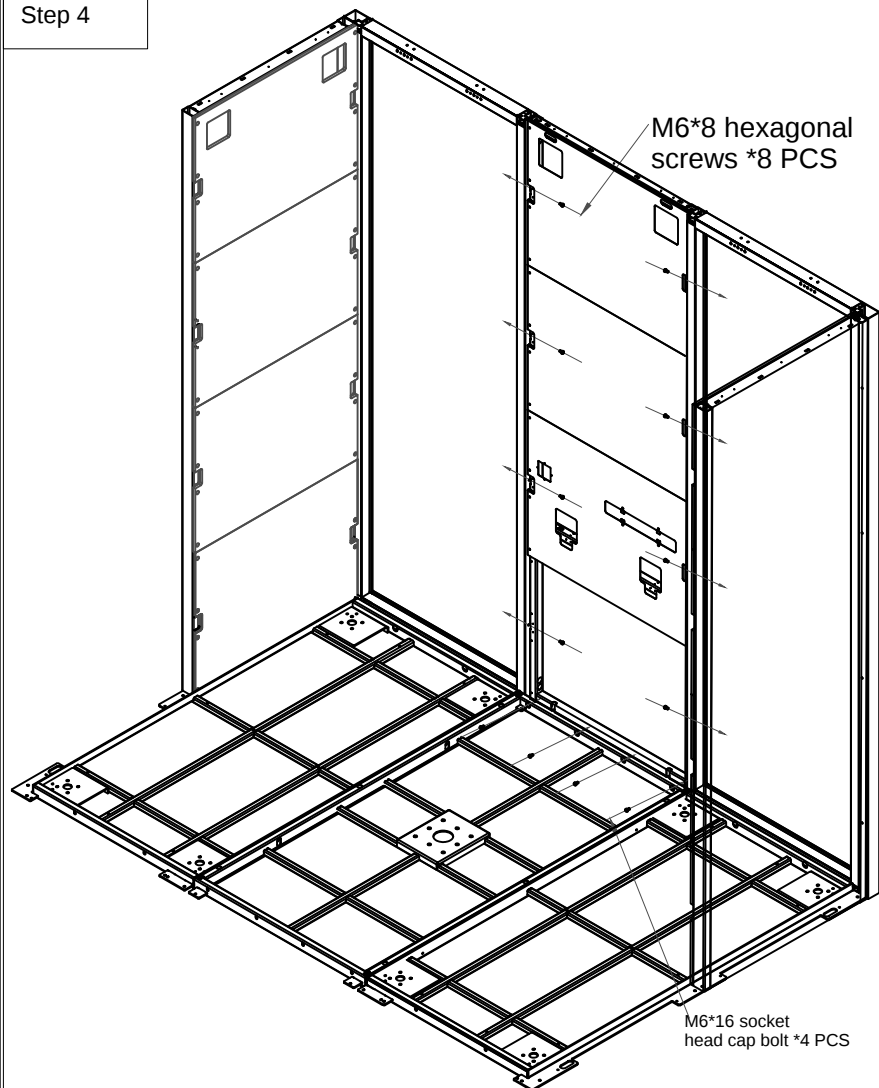


Installation of the middle back glass frame: After positioning the bottom frame with the corresponding wall, use M6*16 socket head cap bolt to fix the middle back glass frame to the bottom frame, and then use M6*8 hexagonal screws to fix the middle back glass frame to the left and right glass wall.

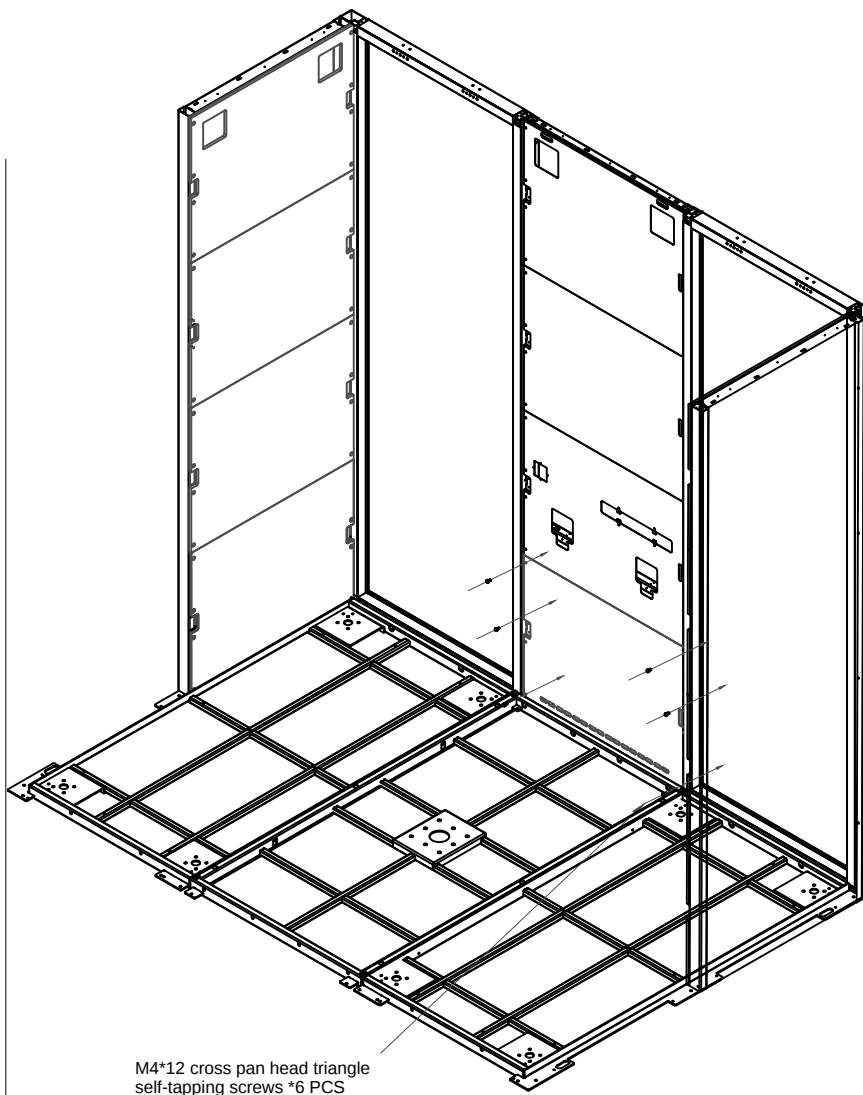


After the installation of the middle back wall, fix the inner lower panel to the middle back wall with M4*12 cross pan head triangle self-tapping screws.

Step 5

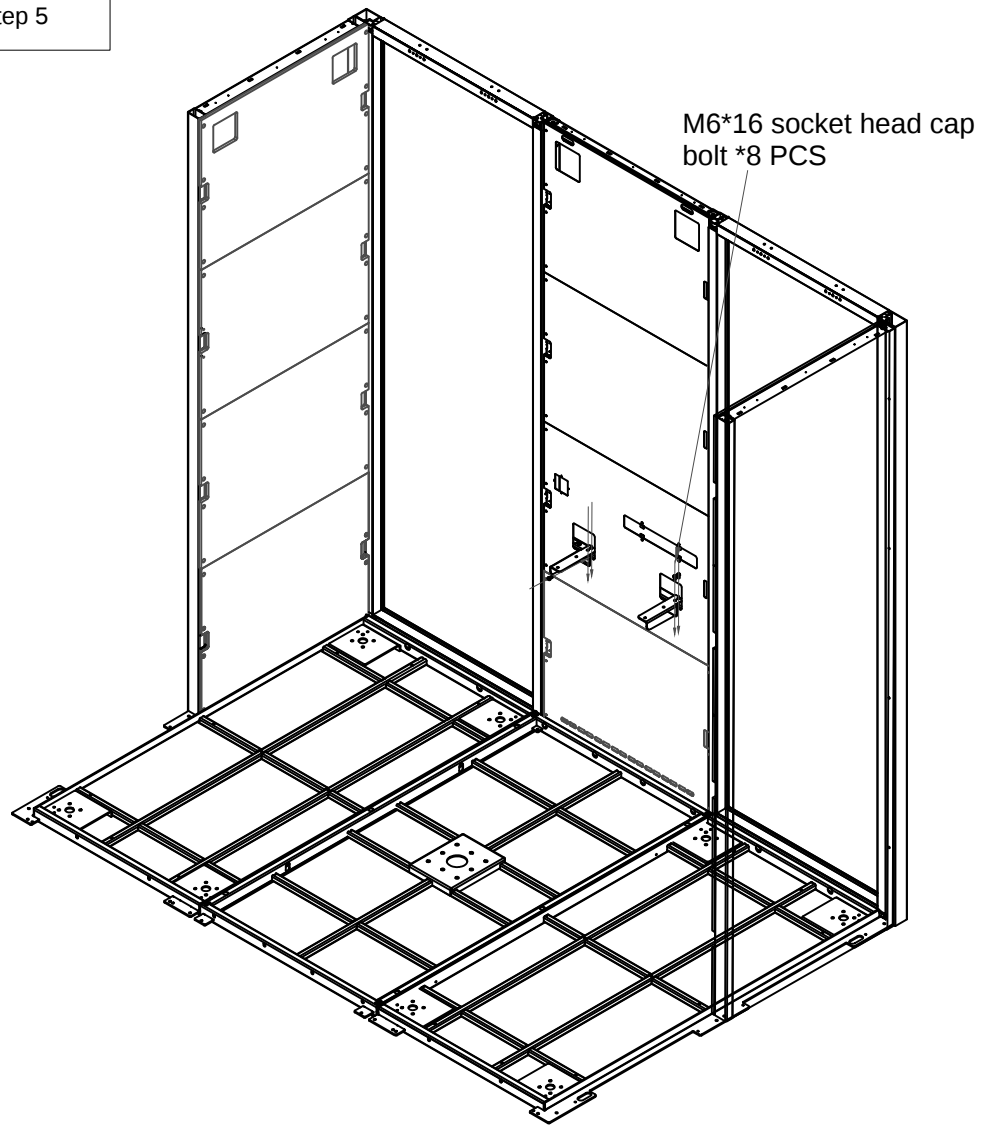


Tabletop support arm installation: Use M6*16 socket head cap bolt to install the tabletop arm onto the reinforcement rod of the middle back inner frame.

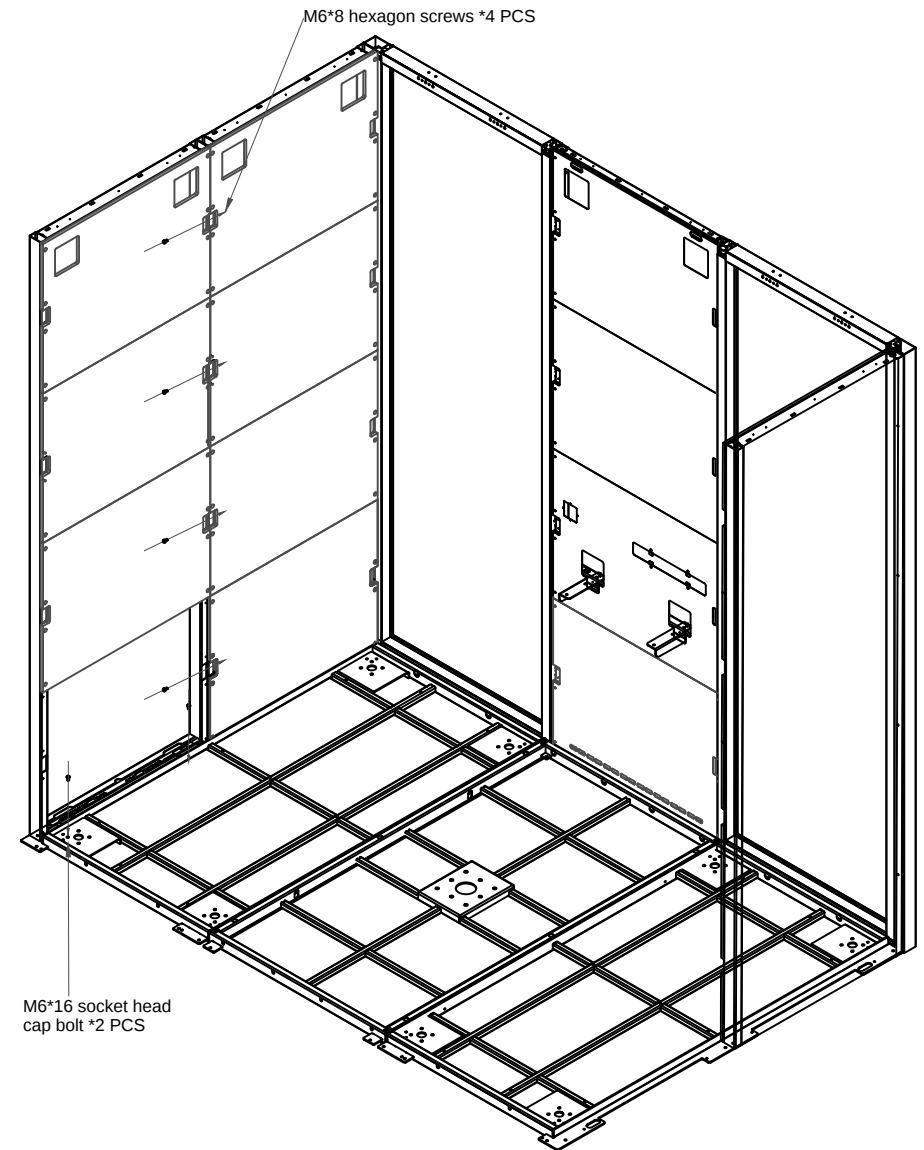


Left wall 2 installation: After the wall corresponds to the bottom frame positioning pin, use M6*16 socket head cap bolt to fix the left wall 2 and the bottom frame, and then use M6*8 hexagon screws to fix the left wall 2 and the left wall 1

Step 6

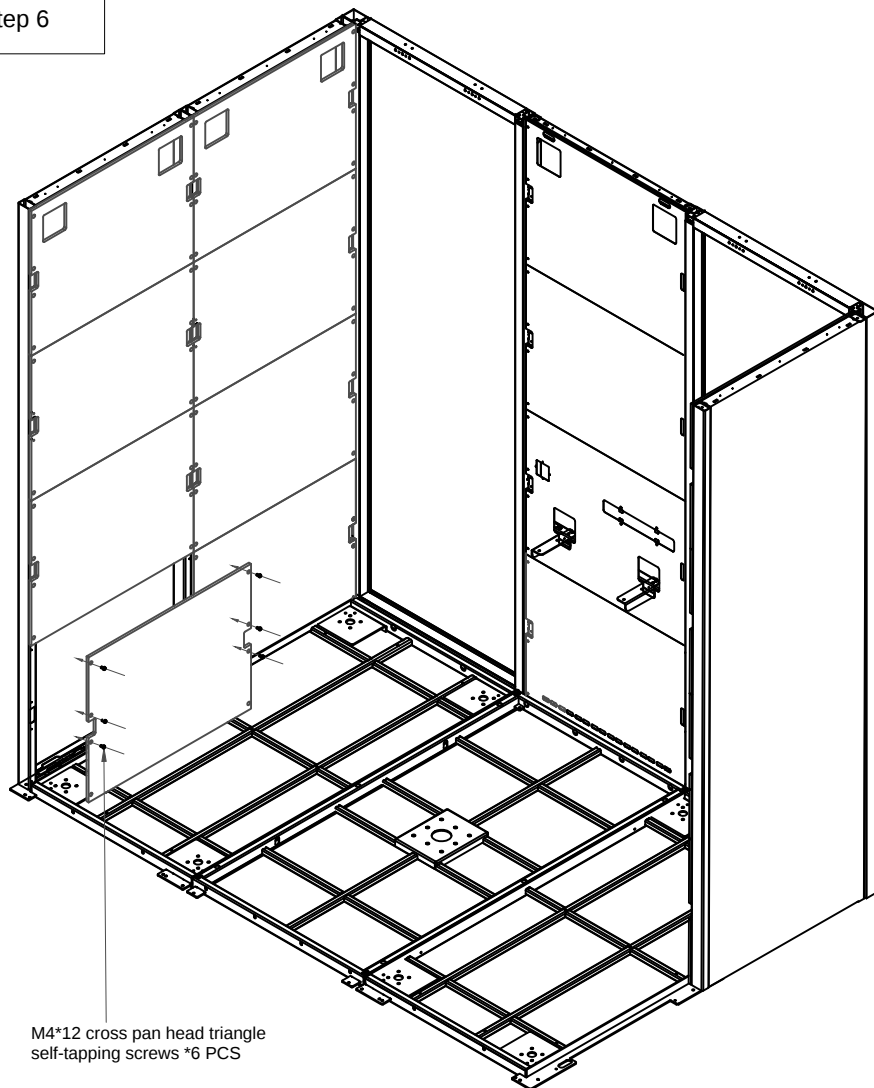


After the installation of the left wall 2, use the M4*12 cross pan head triangle self-tapping screws to fix the inner and lower panels with the left wall 2

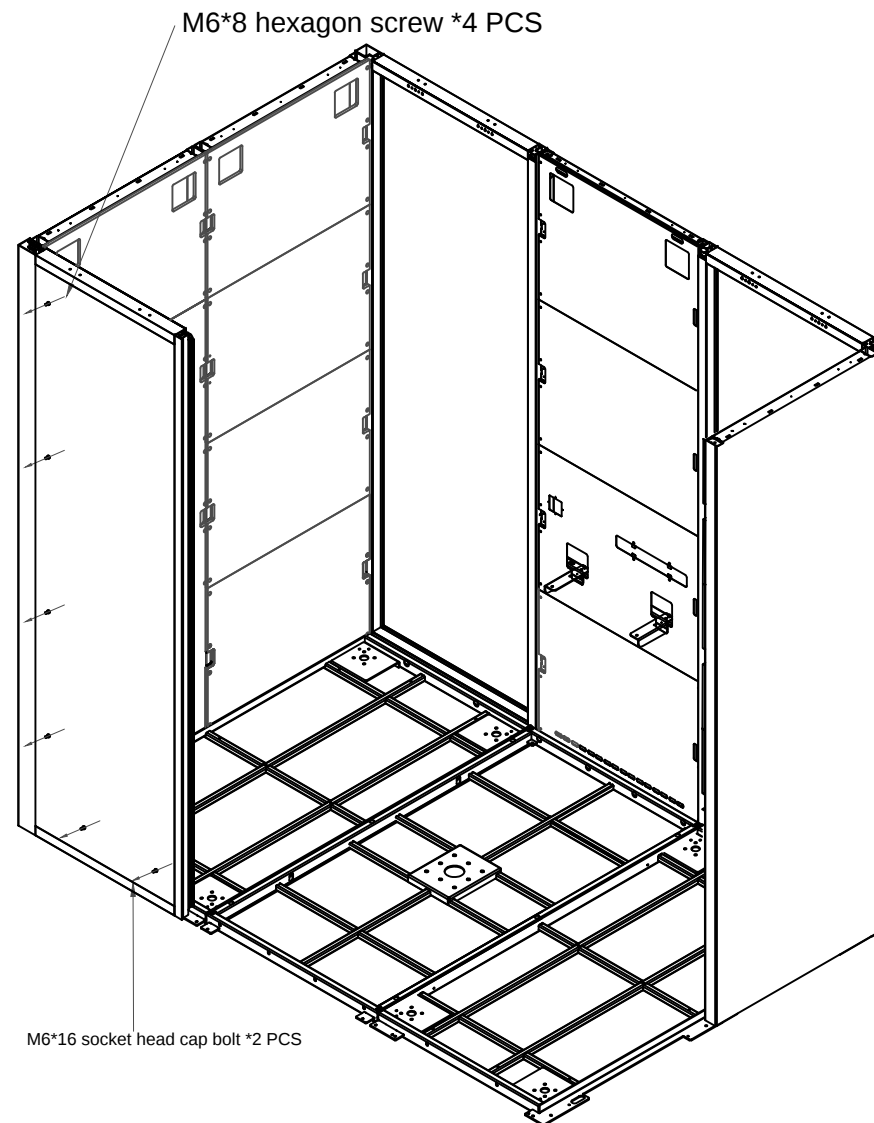


Installation of the left front glass frame: After the wall corresponds to the bottom frame positioning pin, use M6*16 socket head cap bolt to fix the left front glass frame with the bottom frame, and then use M6*8 hexagon screw to fix the left front glass frame and left wall 2

Step 7

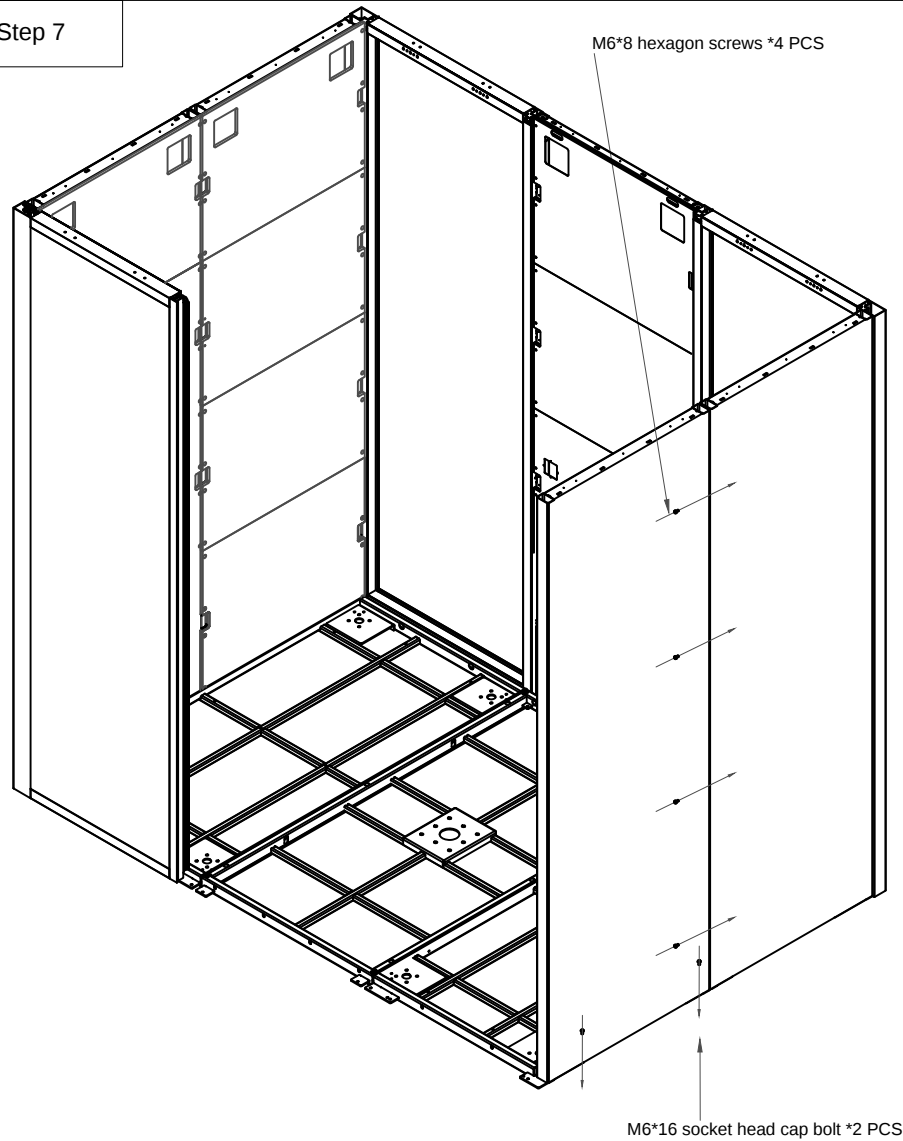


Right wall 2 installation: After the wall corresponds to the bottom frame positioning pin, use M6*16 socket head cap bolt to fix the right wall 2 and the bottom frame, and then use M6*8 hexagon screws to fix the right wall 2 and the right wall 1

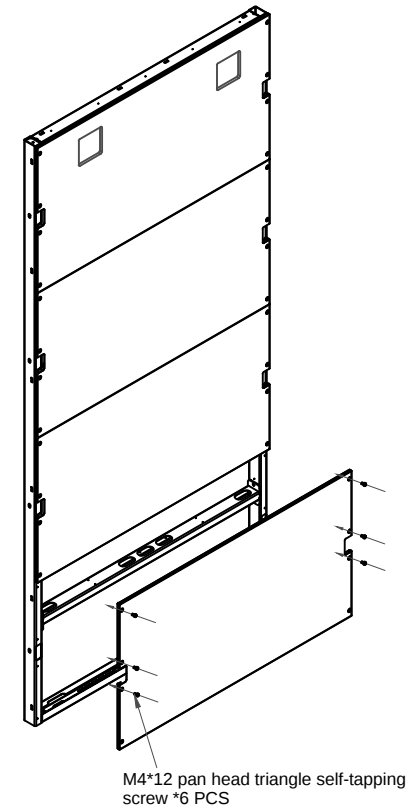


After the installation of the right wall 2, to fix the inner lower panel with the right wall 2 using the M4*12 pan head triangle self-tapping screw.


Step 8

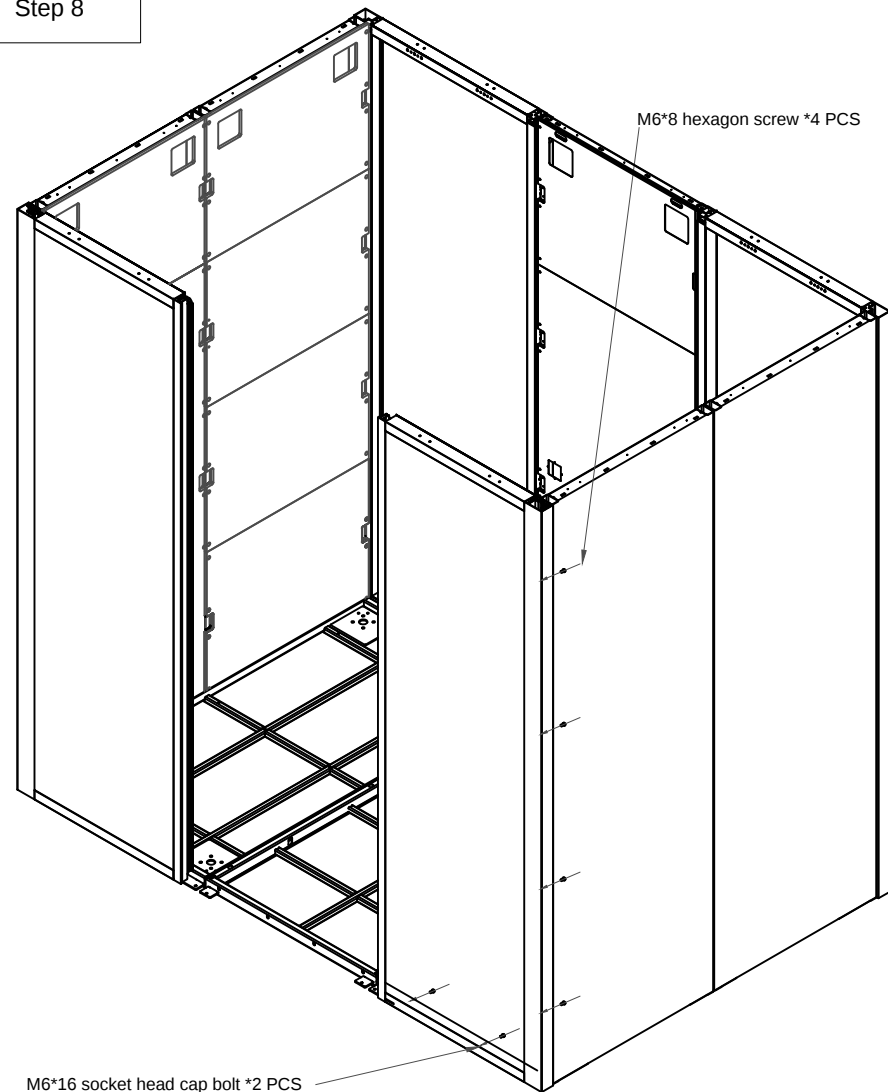


Installation of the right front glass frame: After the wall corresponds to the bottom frame positioning pin, use M6*16 socket head cap bolt to fix the right front glass frame with the bottom frame, and then use M6*8 hexagon screw to fix the right front glass frame and right wall 2

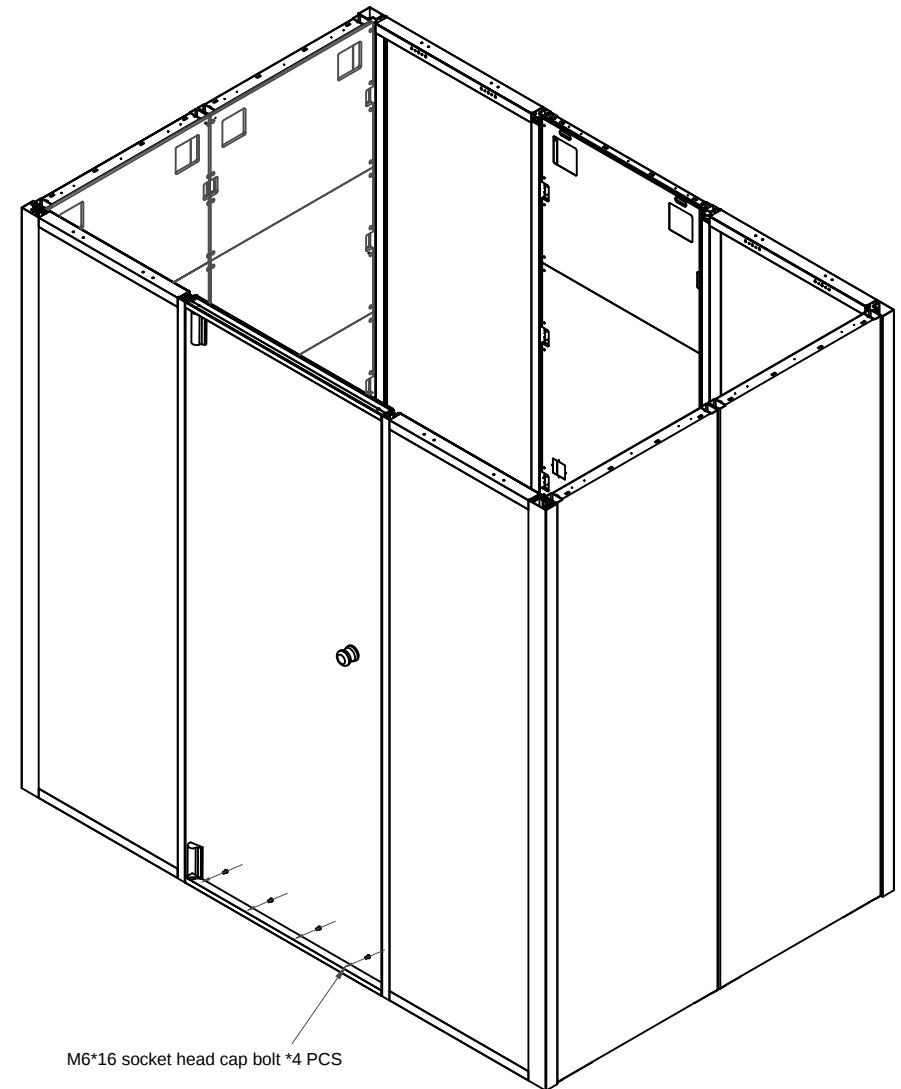


Installation of door frame: After the wall corresponds to the bottom frame positioning, the aluminum frame of the door frame and the aluminum frame of the left and right front panel glass frame are interlocked, and then the bottom is fixed with M6*16 socket head cap bolt.

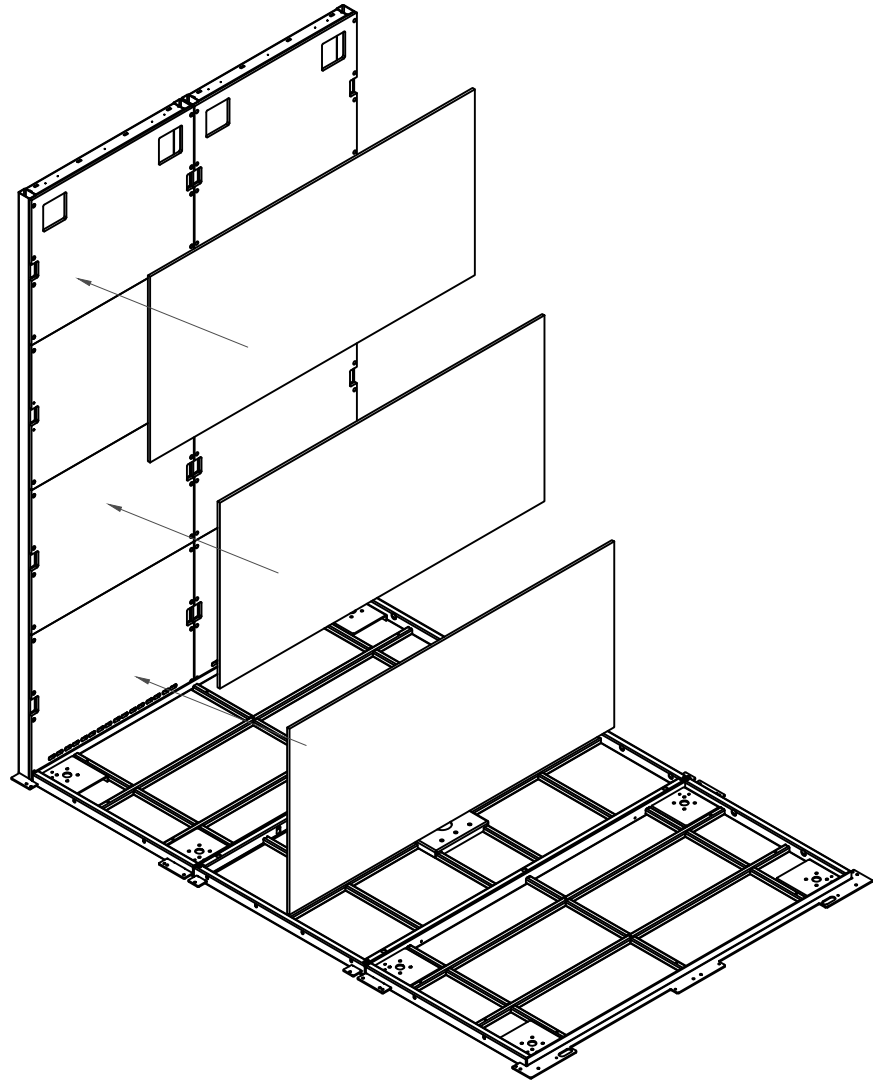

Installation of left and right inner and outer panels: Attach the inner and outer decorative walls to the inner panel using magnets.


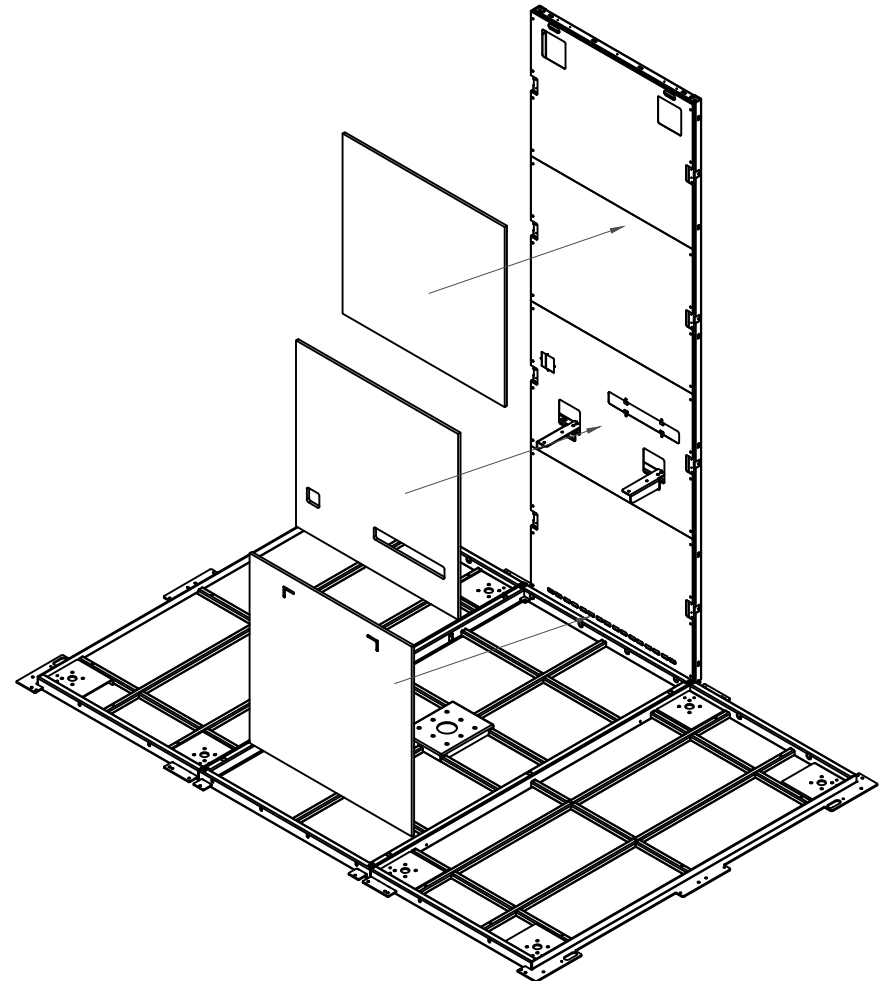


Installation of middle back inner and outer panels: Attach the inner and outer decorative walls to the inner panel using magnets.

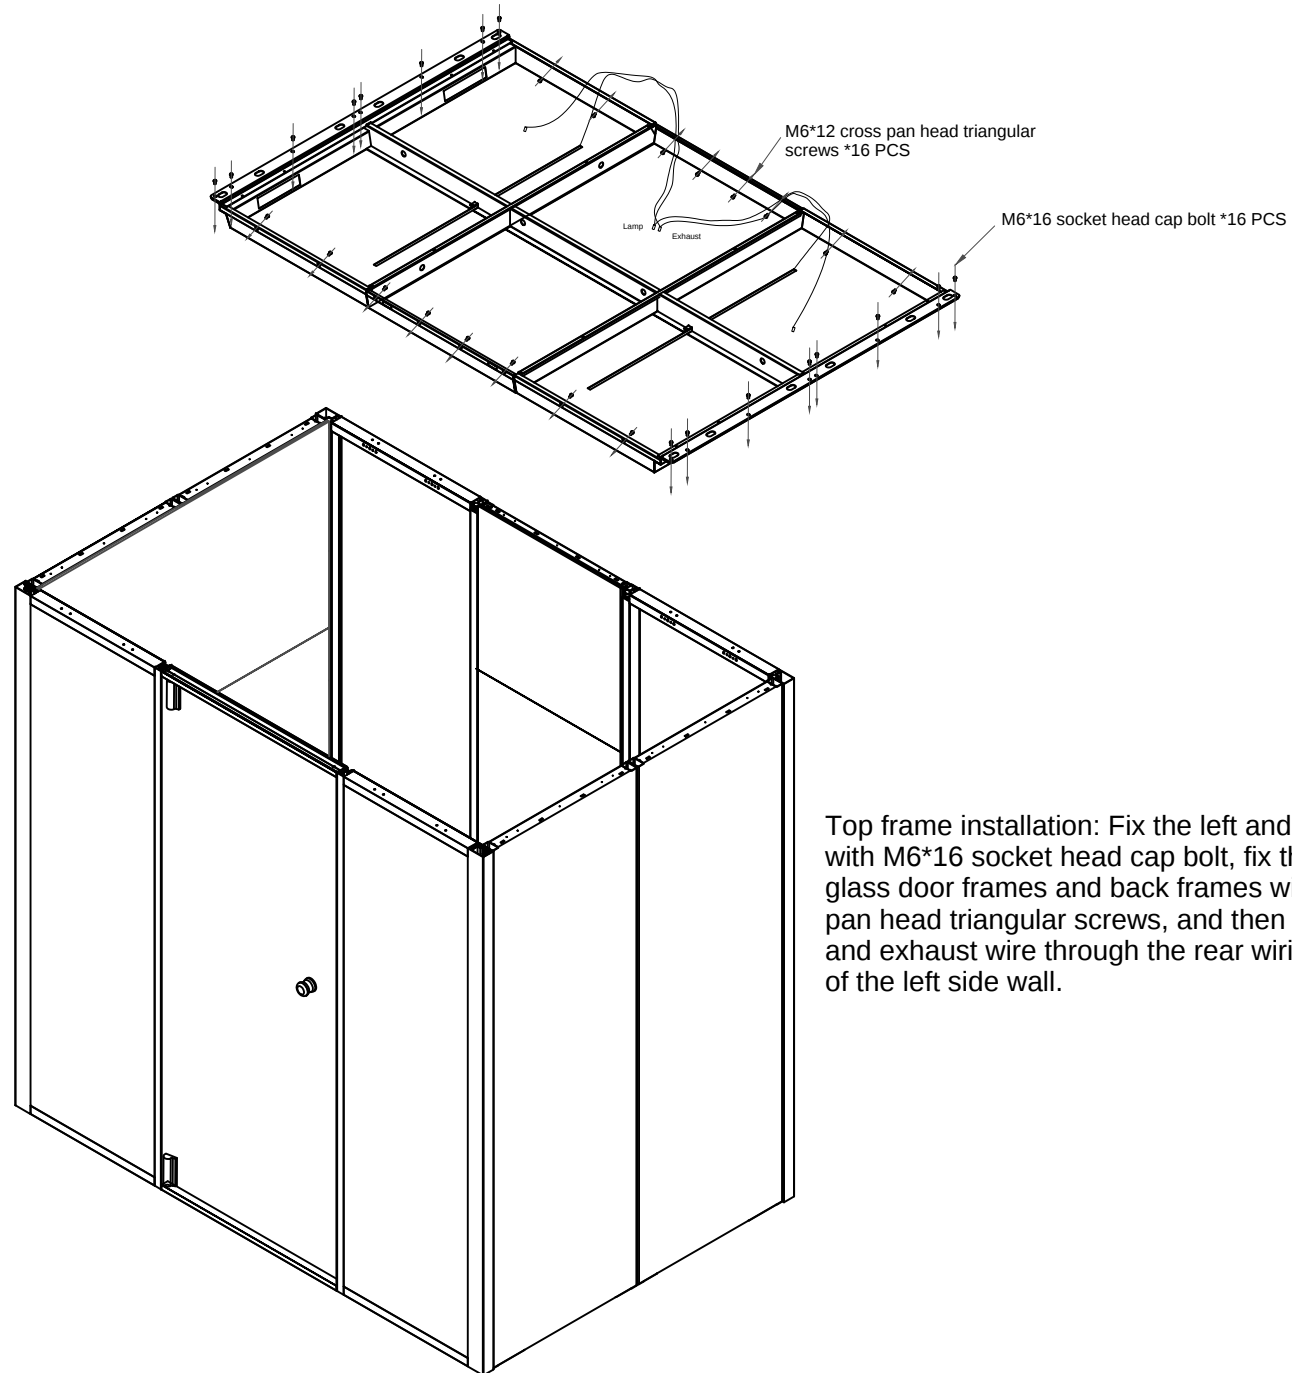

Step 11


Pass the lamp and exhaust line through the wiring hole into the switch -- the middle back wall

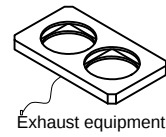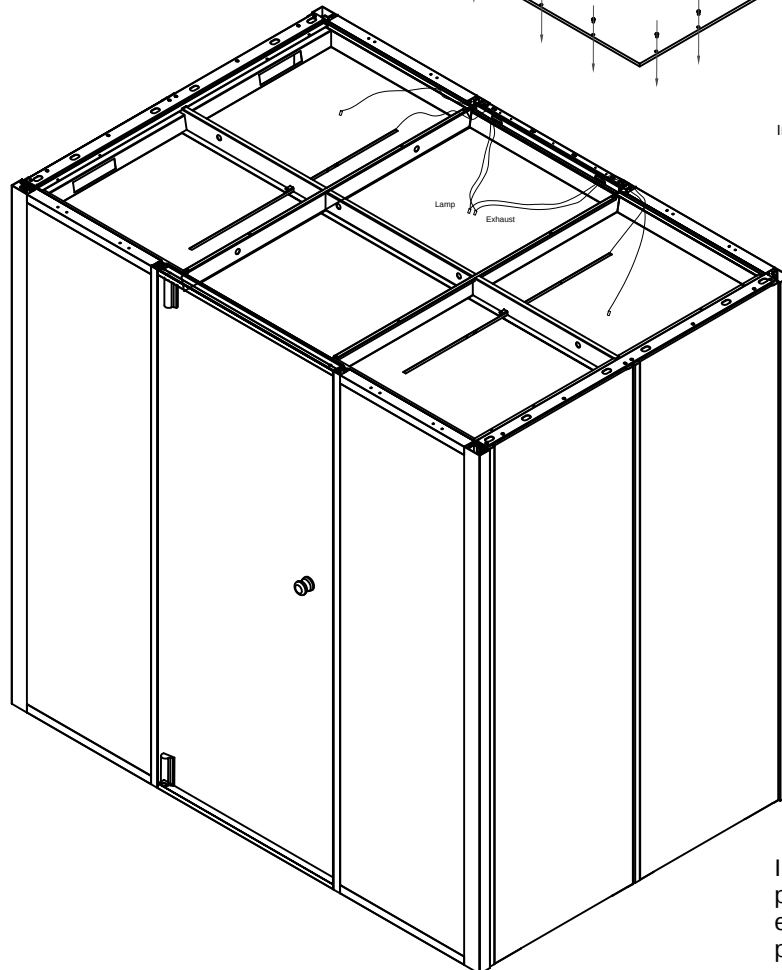


Exhaust equipment

M6*20 cross pan head triangular screws *26 PCS


Internal line in the top frame

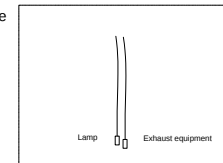


Internal line in the middle back wall

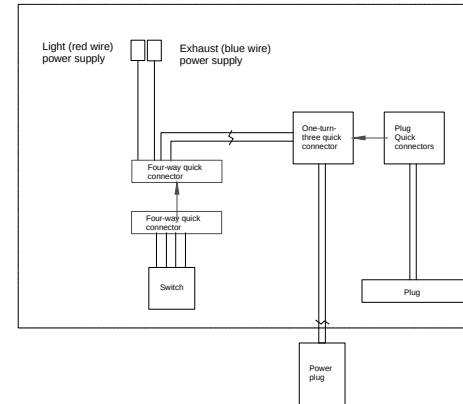


Installation of top plate and exhaust equipment: Fix the wooden top plate with M6*20 cross pan head triangular screws, then connect the exhaust module quick connector and place it in the opening of the top plate.

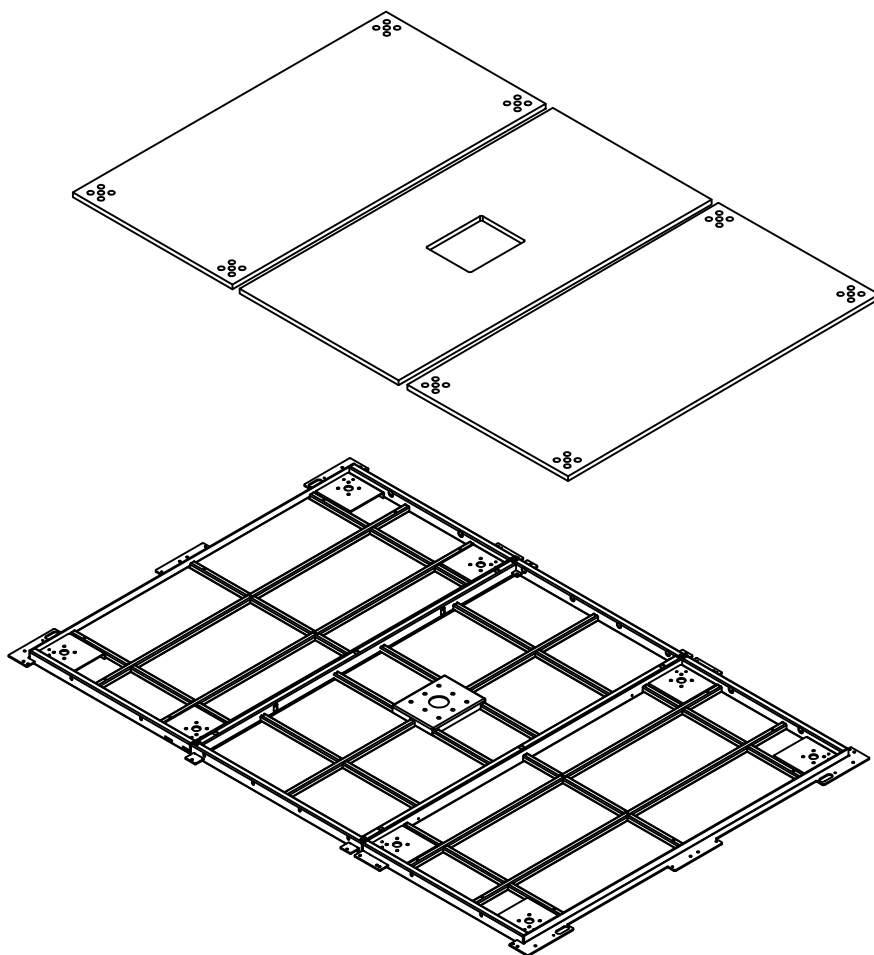


To place wooden boards

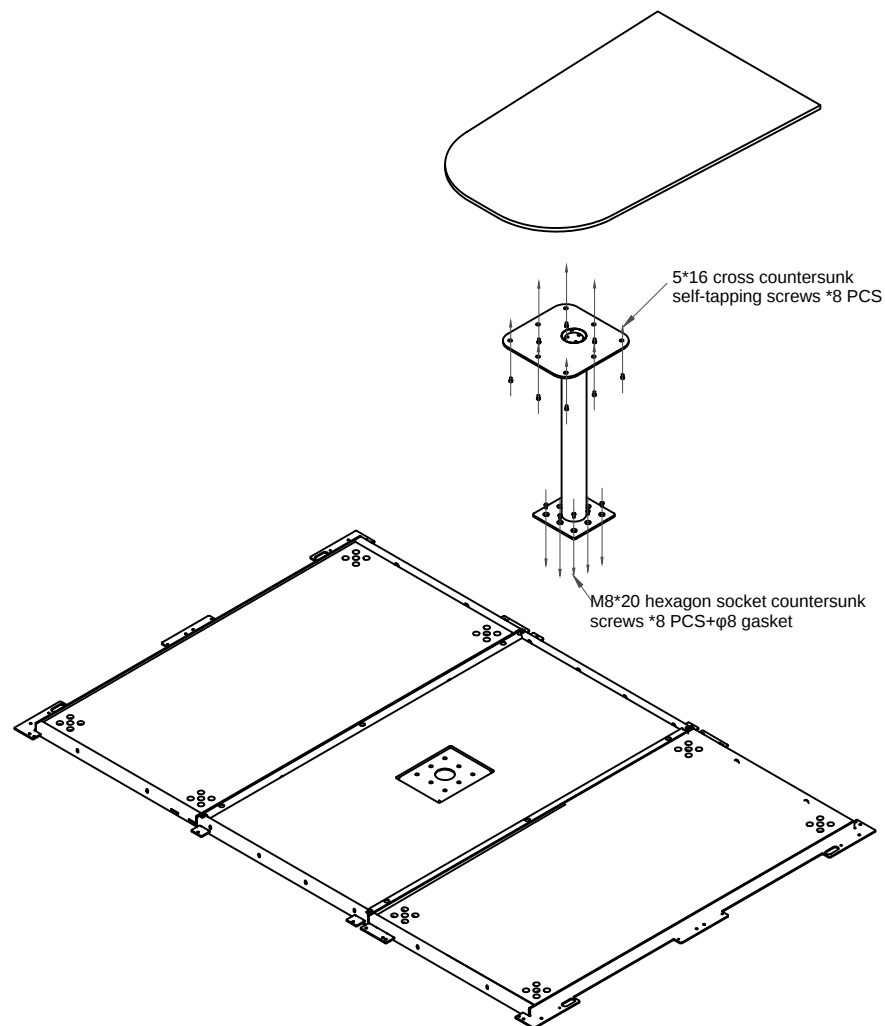

After fixing the table frame to the bottom frame with M8*20 hexagon socket countersunk screws, fix it with 5*16 cross countersunk self-tapping screws.

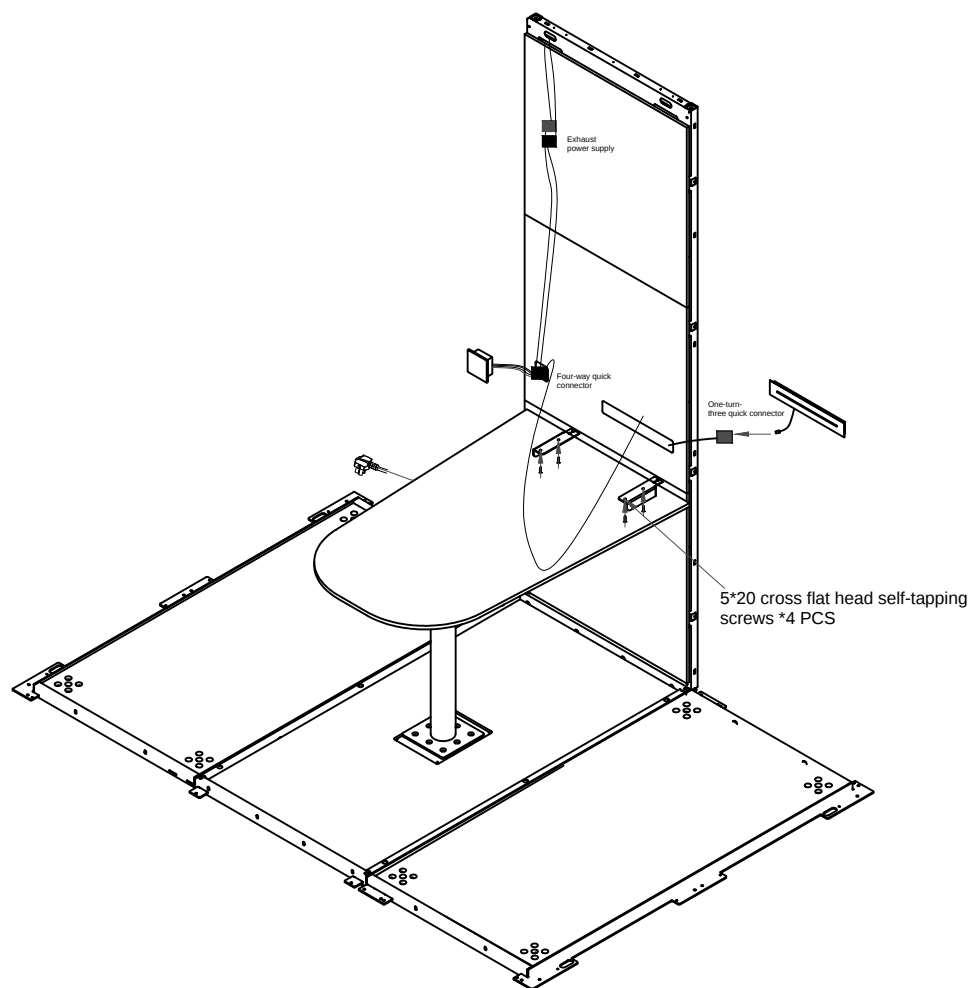

Using 5*20 cross flat head self-tapping screws to fix the table top, to connect 4 quick connectors, access the switch and screw it to the interior wall, and connect the socket wire with the quick fix connector on the left wall

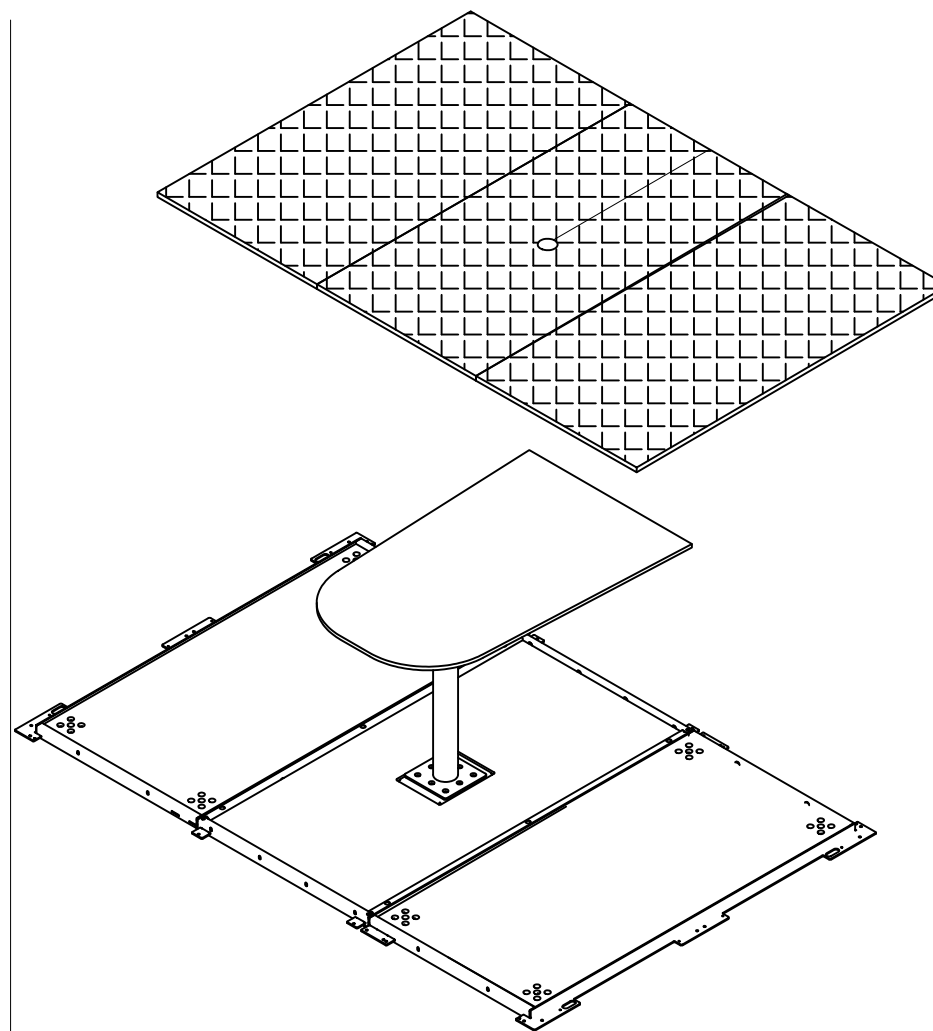

To place the carpet